

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use

... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box	Low		RATE CHART LB. PER ACRE. Standard Duty 607091+44t															
Density..LB Cu.Ft. ..			48 Figures in body of chart = mm of door opening															
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120			
Rate																		
20					6	7	8	9	10	10	11	12	13	15	15			
30			6	8	9	10	12	13	14	15	17	18	20	20	22			
40		7	8	11	12	14	16	17	19	21	22	24	26	26	29			
50	7	9	11	13	15	17	20	21	24	26	28	30	33	33	36			
60	8	10	13	16	18	21	24	26	29	31	34	36	40	40	44			
70	9	12	15	18	21	24	28	30	33	36	39	42	46	46	51			
80	11	14	17	21	24	27	32	34	38	41	45	48	53	53	58			
90	12	15	19	24	27	31	36	39	43	46	50	53	59	59	65			
100	13	17	21	26	30	34	40	43	48	51	56	59	66	66	73			
110	15	19	23	29	33	38	44	47	52	57	62	65	73	73	80			
120	16	21	25	32	36	41	48	51	57	62	67	71	79	79	87			
130	17	22	27	34	39	45	51	56	62	67	73	77	86	86	94			
140	18	24	30	37	43	48	55	60	67	72	79	83	92	92	102			
150	20	26	32	40	46	51	59	64	71	77	84	89	99	99	109			
160	21	27	34	42	49	55	63	69	76	82	90	95	106	106	116			
170	22	29	36	45	52	58	67	73	81	88	95	101	112	112	123			
180	24	31	38	48	55	62	71	77	86	93	101	107	119	119	131			
190	25	33	40	50	58	65	75	82	90	98	107	113	125	125	138			
200	26	34	42	53	61	69	79	86	95	103	112	119	132	132	145			
210	28	36	44	55	64	72	83	90	100	108	118	125	139	139	152			
220	29	38	46	58	67	76	87	94	105	113	123	131	145	145	160			
230	30	39	49	61	70	79	91	99	109	118	129	137	152	152	167			
240	32	41	51	63	73	82	95	103	114	124	135	143	158	158	174			
250	33	43	53	66	76	86	99	107	119	129	140	148	165	165	181			
260	34	45	55	69	79	89	103	112	124	134	146	154	172	172	189			
270	36	46	57	71	82	93	107	116	128	139	151	160	178	178	196			
280	37	48	59	74	85	96	111	120	133	144	157	166	185	185	203			
290	38	50	61	77	88	100	115	124	138	149	163	172	191	191	211			
300	40	51	63	79	91	103	119	129	143	154	168	178	198	198	218			
320	42	55	68	84	97	110	127	137	152	165	180	190	211	211	232			
340	45	58	72	90	103	117	135	146	162	175	191	202	224	224	247			
360	48	62	76	95	109	124	143	154	171	185	202	214	238	238	261			
380	50	65	80	100	115	130	150	163	181	196	213	226	251	251	276			
400	53	69	84	106	121	137	158	172	190	206	224	238	264	264	290			
425	56	73	90	112	129	146	168	182	202	219	238	252	280	280				
450	59	77	95	119	137	154	178	193	214	232	252	267	297	297				
475	63	82	100	125	144	163	188	204	226	245	266	282						
500	66	86	106	132	152	172	198	214	238	257	280	297						
525	69	90	111	139	159	180	208	225	249	270	295							
550	73	94	116	145	167	189	218	236	261	283								
575	76	99	121	152	175	197	228	247	273	296								
600	79	103	127	158	182	206	238	257	285									

Gear Box	Low		RATE CHART LB. PER ACRE. Standard Duty 607091+44t															
Density..LB Cu.Ft. ..			49 Figures in body of chart = mm of door opening															
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120			
Rate																		
20																		
30			6	8	9	10	12	13	14	15	17	18	20	20	21			
40		7	8	10	12	13	16	17	19	20	22	23	26	26	28			
50	6	8	10	13	15	17	19	21	23	25	27	29	32	32	36			
60	8	10	12	16	18	20	23	25	28	30	33	35	39	39	43			
70	9	12	14	18	21	24	27	29	33	35	38	41	45	45	50			
80	10	13	17	21	24	27	31	34	37	40	44	47	52	52	57			
90	12	15	19	23	27	30	35	38	42	45	49	52	58	58	64			
100	13	17	21	26	30	34	39	42	47	50	55	58	65	65	71			
110	14	18	23	28	33	37	43	46	51	55	60	64	71	71	78			
120	16	20	25	31	36	40	47	50	56	61	66	70	78	78	85			
130	17	22	27	34	39	44	50	55	61	66	71	76	84	84	92			
140	18	24	29	36	42	47	54	59	65	71	77	81	91	91	100			
150	19	25	31	39	45	50	58	63	70	76	82	87	97	97	107			
160	21	27	33	41	48	54	62	67	74	81	88	93	103	103	114			
170	22	29	35	44	51	57	66	71	79	86	93	99	110	110	121			
180	23	30	37	47	54	61	70	76	84	91	99	105	116	116	128			
190	25	32	39	49	57	64	74	80	88	96	104	111	123	123	135			
200	26	34	41	52	59	67	78	84	93	101	110	116	129	129	142			
210	27	35	43	54	62	71	81	88	98	106	115	122	136	136	149			
220	28	37	46	57	65	74	85	92	102	111	121	128	142	142	156			
230	30	39	48	59	68	77	89	97	107	116	126	134	149	149	164			
240	31	40	50	62	71	81	93	101	112	121	132	140	155	155	171			
250	32	42	52	65	74	84	97	105	116	126	137	145	162	162	178			
260	34	44	54	67	77	87	101	109	121	131	143	151	168	168	185			
270	35	45	56	70	80	91	105	113	126	136	148	157	175	175	192			
280	36	47	58	72	83	94	109	118	130	141	154	163	181	181	199			
290	37	49	60	75	86	97	112	122	135	146	159	169	187	187	206			
300	39	50	62	78	89	101	116	126	140	151	165	175	194	194	213			
320	41	54	66	83	95	108	124	134	149	161	176	186	207	207	228			
340	44	57	70	88	101	114	132	143	158	171	187	198	220	220	242			
360	47	61	74	93	107	121	140	151	168	182	198	209	233	233	256			
380	49	64	79	98	113	128	147	160	177	192	209	221	246	246	270			
400	52	67	83	103	119	134	155	168	186	202	220	233	259	259	284			
425	55	71	88	110	126	143	165	179	198	214	234	247	275	275				
450	58	76	93	116	134	151	175	189	209	227	247	262	291	291				
475	61	80	98	123	141	160	184	200	221	240	261	276						
500	65	84	103	129	149	168	194	210	233	252	275	291						
525	68	88	109	136	156	176	204	221	244	265	289							
550	71	92	114	142	164	185	213	231	256	277								
575	74	97	119	149	171	193	223	242	268	290								
600	78	101	124	155	178	202	233	252	279									

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use

... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box	RATE CHART LB. PER ACRE. Standard Duty 607091+44t														
	Low	Density..LB Cu.Ft. .. 50 Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20						7	8	8	9	10	11	11	13	14	14
30			6	8	9	10	11	12	14	15	16	17	19	19	21
40		7	8	10	12	13	15	16	18	20	22	23	25	25	28
50	6	8	10	13	15	16	19	21	23	25	27	29	32	32	35
60	8	10	12	15	17	20	23	25	27	30	32	34	38	38	42
70	9	12	14	18	20	23	27	29	32	35	38	40	44	44	49
80	10	13	16	20	23	26	30	33	36	40	43	46	51	51	56
90	11	15	18	23	26	30	34	37	41	44	48	51	57	57	63
100	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
110	14	18	22	28	32	36	42	45	50	54	59	63	70	70	77
120	15	20	24	30	35	40	46	49	55	59	65	68	76	76	84
130	16	21	26	33	38	43	49	54	59	64	70	74	82	82	91
140	18	23	28	35	41	46	53	58	64	69	75	80	89	89	98
150	19	25	30	38	44	49	57	62	68	74	81	86	95	95	105
160	20	26	32	41	47	53	61	66	73	79	86	91	101	101	112
170	22	28	34	43	50	56	65	70	78	84	92	97	108	108	118
180	23	30	36	46	52	59	68	74	82	89	97	103	114	114	125
190	24	31	39	48	55	63	72	78	87	94	102	108	120	120	132
200	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
210	27	35	43	53	61	69	80	86	96	104	113	120	133	133	146
220	28	36	45	56	64	72	84	91	100	109	118	125	139	139	153
230	29	38	47	58	67	76	87	95	105	114	124	131	146	146	160
240	30	40	49	61	70	79	91	99	109	119	129	137	152	152	167
250	32	41	51	63	73	82	95	103	114	124	135	143	158	158	174
260	33	43	53	66	76	86	99	107	119	128	140	148	165	165	181
270	34	44	55	68	79	89	103	111	123	133	145	154	171	171	188
280	35	46	57	71	82	92	106	115	128	138	151	160	177	177	195
290	37	48	59	73	85	96	110	119	132	143	156	165	184	184	202
300	38	49	61	76	87	99	114	124	137	148	162	171	190	190	209
320	41	53	65	81	93	105	122	132	146	158	172	182	203	203	223
340	43	56	69	86	99	112	129	140	155	168	183	194	215	215	237
360	46	59	73	91	105	119	137	148	164	178	194	205	228	228	251
380	48	63	77	96	111	125	144	156	173	188	205	217	241	241	265
400	51	66	81	101	117	132	152	165	182	198	215	228	253	253	279
425	54	70	86	108	124	140	162	175	194	210	229	242	269	269	296
450	57	74	91	114	131	148	171	185	205	222	242	257	285	285	
475	60	78	96	120	138	156	181	196	217	235	256	271			
500	63	82	101	127	146	165	190	206	228	247	269	285			
525	67	86	106	133	153	173	200	216	239	259	283	299			
550	70	91	112	139	160	181	209	227	251	272	296				
575	73	95	117	146	168	189	219	237	262	284					
600	76	99	122	152	175	198	228	247	274	297					

Gear Box	RATE CHART LB. PER ACRE. Standard Duty 607091+44t														
	Low	Density..LB Cu.Ft. .. 55 Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20									7	8	9	10	11	12	13
30									9	11	12	14	15	17	18
40			7	9	11	12	14	15	17	18	20	21	23	23	25
50		7	9	12	13	15	17	19	21	22	24	26	29	29	32
60	7	9	11	14	16	18	21	22	25	27	29	31	34	36	40
70	8	10	13	16	19	21	24	26	29	31	34	36	40	40	44
80	9	12	15	18	21	24	28	30	33	36	39	41	46	46	51
90	10	13	17	21	24	27	31	34	37	40	44	47	52	52	57
100	12	15	18	23	26	30	35	37	41	45	49	52	58	58	63
110	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
120	14	18	22	28	32	36	41	45	50	54	59	62	69	69	76
130	15	19	24	30	34	39	45	49	54	58	64	67	75	75	82
140	16	21	26	32	37	42	48	52	58	63	69	73	81	81	89
150	17	22	28	35	40	45	52	56	62	67	73	78	86	86	95
160	18	24	29	37	42	48	55	60	66	72	78	83	92	92	101
170	20	25	31	39	45	51	59	64	71	76	83	88	98	98	108
180	21	27	33	41	48	54	62	67	75	81	88	93	104	104	114
190	22	28	35	44	50	57	66	71	79	85	93	98	109	109	120
200	23	30	37	46	53	60	69	75	83	90	98	104	115	115	127
210	24	31	39	48	56	63	73	79	87	94	103	109	121	121	133
220	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
230	26	34	42	53	61	69	79	86	95	103	113	119	132	132	146
240	28	36	44	55	64	72	83	90	100	108	118	124	138	138	152
250	29	37	46	58	66	75	86	94	104	112	122	130	144	144	158
260	30	39	48	60	69	78	90	97	108	117	127	135	150	150	165
270	31	40	50	62	72	81	93	101	112	121	132	140	156	156	171
280	32	42	52	65	74	84	97	105	116	126	137	145	161	161	177
290	33	43	53	67	77	87	100	109	120	130	142	150	167	167	184
300	35	45	55	69	79	89	102	111	124	135	147	156	173	173	190
320	37	48	59	74	85	96	111	120	133	144	157	166	184	184	203
340	39	51	63	78	90	102	118	127	141	153	166	176	196	196	215
360	41	54	66	83	95	108	124	135	149	162	176	187	207	207	228
380	44	57	70	88	101	114	131	142	158	171	186	197	219	219	241
400	46	60	74	92	106	120	138	150	166	180	196	207	230	230	253
425	49	64	78	98	113	127	147	159	176	191	208	220	245	245	269
450	52	67	83	104	119	135	156	168	187	202	220	233	259	259	285
475	55	71	88	109	126	142	164	178	197	213	233	246	274	274	
500	58	75	92	115	132	150	173	187	207	225	245	259	288	288	
525	60	79	97	121	139	157	181	197	218	236	257	272			
550	63	82	101	127	146	165	190	206	228	247	269	285			
575	66	86	106	132	152	172	199	215	238	258	282	298			
600	69	90	111	138	159	180	207	225	249	270	294				

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use

... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t													
Density..LB Cu.Ft. ..		60 Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20							6	7	8	8	9	10	11	12	12
30				6	7	8	10	10	11	12	13	14	16	16	17
40			7	8	10	11	13	14	15	16	18	19	21	21	23
50		7	8	11	12	14	16	17	19	21	22	24	26	26	29
60	6	8	10	13	15	16	19	21	23	25	27	29	32	32	35
70	7	10	12	15	17	19	22	24	27	29	31	33	37	37	41
80	8	11	14	17	19	22	25	27	30	33	36	38	42	42	46
90	10	12	15	19	22	25	29	31	34	37	40	43	48	48	52
100	11	14	17	21	24	27	32	34	38	41	45	48	53	53	58
110	12	15	19	23	27	30	35	38	42	45	49	52	58	58	64
120	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
130	14	18	22	27	32	36	41	45	49	54	58	62	69	69	76
140	15	19	24	30	34	38	44	48	53	58	63	67	74	74	81
150	16	21	25	32	36	41	48	51	57	62	67	71	79	79	87
160	17	22	27	34	39	44	51	55	61	66	72	76	84	84	93
170	18	23	29	36	41	47	54	58	65	70	76	81	90	90	99
180	19	25	30	38	44	49	57	62	68	74	81	86	95	95	105
190	20	26	32	40	46	52	60	65	72	78	85	90	100	100	110
200	21	27	34	42	49	55	63	69	76	82	90	95	106	106	116
210	22	29	35	44	51	58	67	72	80	86	94	100	111	111	122
220	23	30	37	46	53	60	70	76	84	91	99	105	116	116	128
230	24	32	39	49	56	63	73	79	87	95	103	109	121	121	134
240	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
250	26	34	42	53	61	69	79	86	95	103	112	119	132	132	145
260	27	36	44	55	63	71	82	89	99	107	117	124	137	137	151
270	29	37	46	57	66	74	86	93	103	111	121	128	143	143	157
280	30	38	47	59	68	77	89	96	106	115	126	133	148	148	163
290	31	40	49	61	70	80	92	100	110	119	130	138	153	153	168
300	32	41	51	63	73	82	95	103	114	124	135	143	158	158	174
320	34	44	54	68	78	88	101	110	122	132	144	152	169	169	186
340	36	47	57	72	83	93	108	117	129	140	153	162	180	180	197
360	38	49	61	76	87	99	114	124	137	148	162	171	190	190	209
380	40	52	64	80	92	104	120	130	144	156	171	181	201	201	221
400	42	55	68	84	97	110	127	137	152	165	180	190	211	211	232
425	45	58	72	90	103	117	135	146	162	175	191	202	224	224	247
450	48	62	76	95	109	124	143	154	171	185	202	214	238	238	261
475	50	65	80	100	115	130	150	163	181	196	213	226	251	251	276
500	53	69	84	106	121	137	158	172	190	206	224	238	264	264	290
525	55	72	89	111	128	144	166	180	200	216	236	249	277	277	
550	58	76	93	116	134	151	174	189	209	227	247	261	290	290	
575	61	79	97	121	140	158	182	197	219	237	258	273			
600	63	82	101	127	146	165	190	206	228	247	269	285			

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t													
Density..LB Cu.Ft. ..		65 Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20															11
30															16
40				6	8	9	10	12	13	14	15	17	18	19	21
50		6	8	10	11	13	15	16	18	19	21	22	24	24	27
60		8	9	12	13	15	18	19	21	23	25	26	29	29	32
70	7	9	11	14	16	18	20	22	25	27	29	31	34	34	38
80	8	10	12	16	18	20	23	25	28	30	33	35	39	39	43
90	9	11	14	18	20	23	26	29	32	34	37	39	44	44	48
100	10	13	16	19	22	25	29	32	35	38	41	44	49	49	54
110	11	14	17	21	25	28	32	35	39	42	46	48	54	54	59
120	12	15	19	23	27	30	35	38	42	46	50	53	58	58	64
130	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
140	14	18	22	27	31	35	41	44	49	53	58	61	68	68	75
150	15	19	23	29	34	38	44	48	53	57	62	66	73	73	80
160	16	20	25	31	36	41	47	51	56	61	66	70	78	78	86
170	17	22	27	33	38	43	50	54	60	65	70	75	83	83	91
180	18	23	28	35	40	46	53	57	63	68	75	79	88	88	96
190	19	24	30	37	43	48	56	60	67	72	79	83	93	93	102
200	19	25	31	39	45	51	58	63	70	76	83	88	97	97	107
210	20	27	33	41	47	53	61	67	74	80	87	92	102	102	113
220	21	28	34	43	49	56	64	70	77	84	91	96	107	107	118
230	22	29	36	45	52	58	67	73	81	87	95	101	112	112	123
240	23	30	37	47	54	61	70	76	84	91	99	105	117	117	129
250	24	32	39	49	56	63	73	79	88	95	104	110	122	122	134
260	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
270	26	34	42	53	61	68	79	86	95	103	112	118	132	132	145
280	27	35	44	55	63	71	82	89	98	106	116	123	136	136	150
290	28	37	45	57	65	73	85	92	102	110	120	127	141	141	155
300	29	38	47	58	67	76	88	95	105	114	124	132	146	146	161
320	31	41	50	62	72	81	94	101	112	122	133	140	156	156	172
340	33	43	53	66	76	86	99	108	119	129	141	149	166	166	182
360	35	46	56	70	81	91	105	114	126	137	149	158	175	175	193
380	37	48	59	74	85	96	111	120	133	144	157	167	185	185	204
400	39	51	62	78	90	101	117	127	140	152	166	175	195	195	214
425	41	54	66	83	95	108	124	135	149	162	176	186	207	207	228
450	44	57	70	88	101	114	132	143	158	171	186	197	219	219	241
475	46	60	74	93	106	120	139	150	167	181	197	208	232	232	255
500	49	63	78	97	112	127	146	158	175	190	207	219	244	244	268
525	51	67	82	102	118	133	154	166	184	200	217	230	256	256	281
550	54	70	86	107	123	139	161	174	193	209	228	241	268	268	295
575	56	73	90	112	129	146	168	182	202	219	238	252	280	280	
600	58	76	94	117	135	152	175	190	211	228	249	263	292	292	

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t													
Low		Density..LB Cu.Ft. .. 70													
		Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20									7	7	8	8	9	10	10
30					6	7	8	9	10	11	12	12	14	14	15
40				7	8	9	11	12	13	14	15	16	18	18	20
50			7	9	10	12	14	15	16	18	19	20	23	23	25
60		7	9	11	12	14	16	18	20	21	23	24	27	27	30
70	6	8	10	13	15	16	19	21	23	25	27	29	32	32	35
80	7	9	12	14	17	19	22	24	26	28	31	33	36	36	40
90	8	11	13	16	19	21	24	26	29	32	35	37	41	41	45
100	9	12	14	18	21	24	27	29	33	35	38	41	45	45	50
110	10	13	16	20	23	26	30	32	36	39	42	45	50	50	55
120	11	14	17	22	25	28	33	35	39	42	46	49	54	54	60
130	12	15	19	24	27	31	35	38	42	46	50	53	59	59	65
140	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
150	14	18	22	27	31	35	41	44	49	53	58	61	68	68	75
160	14	19	23	29	33	38	43	47	52	56	62	65	72	72	80
170	15	20	25	31	35	40	46	50	55	60	65	69	77	77	85
180	16	21	26	33	37	42	49	53	59	64	69	73	81	81	90
190	17	22	28	34	40	45	52	56	62	67	73	77	86	86	95
200	18	24	29	36	42	47	54	59	65	71	77	81	91	91	100
210	19	25	30	38	44	49	57	62	68	74	81	86	95	95	105
220	20	26	32	40	46	52	60	65	72	78	85	90	100	100	110
230	21	27	33	42	48	54	62	68	75	81	88	94	104	104	114
240	22	28	35	43	50	56	65	71	78	85	92	98	109	109	119
250	23	29	36	45	52	59	68	74	81	88	96	102	113	113	124
260	24	31	38	47	54	61	71	76	85	92	100	106	118	118	129
270	24	32	39	49	56	64	73	79	88	95	104	110	122	122	134
280	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
290	26	34	42	52	60	68	79	85	94	102	112	118	131	131	144
300	27	35	43	54	62	71	81	88	98	106	115	122	136	136	149
320	29	38	46	58	67	75	87	94	104	113	123	130	145	145	159
340	31	40	49	62	71	80	92	100	111	120	131	138	154	154	169
360	33	42	52	65	75	85	98	106	117	127	138	147	163	163	179
380	34	45	55	69	79	89	103	112	124	134	146	155	172	172	189
400	36	47	58	72	83	94	109	118	130	141	154	163	181	181	199
425	38	50	62	77	88	100	115	125	138	150	163	173	192	192	212
450	41	53	65	81	94	106	122	132	147	159	173	183	204	204	224
475	43	56	69	86	99	112	129	140	155	168	183	193	215	215	236
500	45	59	72	91	104	118	136	147	163	176	192	204	226	226	249
525	48	62	76	95	109	124	143	154	171	185	202	214	238	238	261
550	50	65	80	100	114	129	149	162	179	194	212	224	249	249	274
575	52	68	83	104	120	135	156	169	187	203	221	234	260	260	286
600	54	71	87	109	125	141	163	176	196	212	231	244	272	272	299

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t													
Low		Density..LB Cu.Ft. .. 75													
		Figures in body of chart = mm of door opening													
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
20															
30															
40									7	8	9	10	11	12	13
50			7	8	10	11	13	14	15	16	18	19	21	21	23
60		7	8	10	12	13	15	16	18	20	22	23	25	25	28
70		8	9	11	14	15	18	19	21	23	25	27	30	30	33
80	7	9	11	14	16	18	20	22	24	26	29	30	34	34	37
90	8	10	12	15	17	20	23	25	27	30	32	34	38	38	42
100	8	11	14	17	19	22	25	27	30	33	36	38	42	42	46
110	9	12	15	19	21	24	28	30	33	36	39	42	46	46	51
120	10	13	16	20	23	26	30	33	36	40	43	46	51	51	56
130	11	14	18	22	25	29	33	36	40	43	47	49	55	55	60
140	12	15	19	24	27	31	35	38	43	46	50	53	59	59	65
150	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70
160	14	18	22	27	31	35	41	44	49	53	57	61	68	68	74
170	14	19	23	29	33	37	43	47	52	56	61	65	72	72	79
180	15	20	24	30	35	40	46	49	55	59	65	68	76	76	84
190	16	21	26	32	37	42	48	52	58	63	68	72	80	80	88
200	17	22	27	34	39	44	51	55	61	66	72	76	84	84	93
210	18	23	28	35	41	46	53	58	64	69	75	80	89	89	98
220	19	24	30	37	43	48	56	60	67	72	79	84	93	93	102
230	19	25	31	39	45	51	58	63	70	76	83	87	97	97	107
240	20	26	32	41	47	53	61	66	73	79	86	91	101	101	112
250	21	27	34	42	49	55	63	69	76	82	90	95	106	106	116
260	22	29	35	44	51	57	66	71	79	86	93	99	110	110	121
270	23	30	36	46	52	59	68	74	82	89	97	103	114	114	125
280	24	31	38	47	54	61	71	77	85	92	101	106	118	118	130
290	24	32	39	49	56	64	73	80	88	96	104	110	122	122	135
300	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139
320	27	35	43	54	62	71	81	88	98	106	115	122	136	136	149
340	29	38	46	58	67	75	87	94	104	113	123	130	145	145	159
360	31	40	49	62	71	80	92	100	111	120	131	138	154	154	169
380	33	42	52	65	75	85	98	106	117	127	138	147	163	163	179
400	34	45	55	69	79	89	103	112	124	134	146	155	172	172	189
425	36	47	58	72	83	94	109	118	130	141	154	163	181	181	199
450	38	50	62	77	88	100	115	125	138	150	163	173	192	192	212
475	41	53	65	81	94	106	122	132	147	159	173	183	204	204	224
500	43	56	69	86	99	112	129	140	155	168	183	193	215	215	236
525	45	59	72	91	104	118	136	147	163	176	192	204	226	226	249
550	48	62	76	95	109	124	143	154	171	185	202	214	238	238	261
575	50	65	80	100	114	129	149	162	179	194	212	224	249	249	274
600	52	68	83	104	120	135	156	169	187	203	221	234	260	260	286
600	51	66	81	101	117	132	152	165	182	198	215	228	253	253	279

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t														
Low		Density..LB Cu.Ft. ... 80														
		Figures in body of chart = mm of door opening														
Width		20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate																
20											6	7	7	8	9	9
30							6	7	8	9	10	11	12	12	13	13
40					6	7	8	10	10	11	12	13	14	16	16	17
50			6	8	8	9	10	12	13	14	15	17	18	20	20	22
60		6	8	10	10	11	12	14	15	17	19	20	21	24	24	26
70		7	9	11	13	13	14	17	18	20	22	24	25	28	28	30
80	6	8	10	13	15	16	19	21	21	23	25	27	29	32	32	35
90	7	9	11	14	16	19	21	23	26	28	30	32	32	36	36	39
100	8	10	13	16	18	21	24	26	29	31	34	36	40	40	44	44
110	9	11	14	17	20	23	26	28	31	34	37	39	44	44	48	48
120	10	12	15	19	22	25	29	31	34	37	40	43	48	48	52	52
130	10	13	16	21	24	27	31	33	37	40	44	46	51	51	57	57
140	11	14	18	22	26	29	33	36	40	43	47	50	55	55	61	61
150	12	15	19	24	27	31	36	39	43	46	50	53	59	59	65	65
160	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70	70
170	13	18	22	27	31	35	40	44	48	53	57	61	67	67	74	74
180	14	19	23	29	33	37	43	46	51	56	61	64	71	71	78	78
190	15	20	24	30	35	39	45	49	54	59	64	68	75	75	83	83
200	16	21	25	32	36	41	48	51	57	62	67	71	79	79	87	87
210	17	22	27	33	38	43	50	54	60	65	71	75	83	83	91	91
220	17	23	28	35	40	45	52	57	63	68	74	78	87	87	96	96
230	18	24	29	36	42	47	55	59	66	71	77	82	91	91	100	100
240	19	25	30	38	44	49	57	62	68	74	81	86	95	95	105	105
250	20	26	32	40	46	51	59	64	71	77	84	89	99	99	109	109
260	21	27	33	41	47	54	62	67	74	80	88	93	103	103	113	113
270	21	28	34	43	49	56	64	69	77	83	91	96	107	107	118	118
280	22	29	35	44	51	58	67	72	80	86	94	100	111	111	122	122
290	23	30	37	46	53	60	69	75	83	90	98	103	115	115	126	126
300	24	31	38	48	55	62	71	77	86	93	101	107	119	119	131	131
320	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139	139
340	27	35	43	54	62	70	81	88	97	105	114	121	135	135	148	148
360	29	37	46	57	66	74	86	93	103	111	121	128	143	143	157	157
380	30	39	48	60	69	78	90	98	108	117	128	135	150	150	166	166
400	32	41	51	63	73	82	95	103	114	124	135	143	158	158	174	174
425	34	44	54	67	77	88	101	109	121	131	143	151	168	168	185	185
450	36	46	57	71	82	93	107	116	128	139	151	160	178	178	196	196
475	38	49	60	75	87	98	113	122	135	147	160	169	188	188	207	207
500	40	51	63	79	91	103	119	129	143	154	168	178	198	198	218	218
525	42	54	67	83	96	108	125	135	150	162	177	187	208	208	229	229
550	44	57	70	87	100	113	131	142	157	170	185	196	218	218	240	240
575	46	59	73	91	105	118	137	148	164	178	194	205	228	228	250	250
600	48	62	76	95	109	124	143	154	171	185	202	214	238	238	261	261

Gear Box		RATE CHART LB. PER ACRE. Standard Duty 607091+44t														
Low		Density..LB Cu.Ft. ... 90														
		Figures in body of chart = mm of door opening														
Width		20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate																
20																
30																
40																
50																
60																
70																
80																
90																
100	7	9	11	14	16	18	21	23	26	28	30	32	36	36	39	39
110	8	10	12	15	18	20	23	25	28	30	33	35	39	39	43	43
120	8	11	14	17	19	22	25	27	30	33	36	38	42	42	46	46
130	9	12	15	18	21	24	27	30	33	36	39	41	46	46	50	50
140	10	13	16	20	23	26	30	32	35	38	42	44	49	49	54	54
150	11	14	17	21	24	27	32	34	38	41	45	48	53	53	58	58
160	11	15	18	23	26	29	34	37	41	44	48	51	56	56	62	62
170	12	16	19	24	28	31	36	39	43	47	51	54	60	60	66	66
180	13	16	20	25	29	33	38	41	46	49	54	57	63	63	70	70
190	13	17	21	27	31	35	40	43	48	52	57	60	67	67	74	74
200	14	18	23	28	32	37	42	46	51	55	60	63	70	70	77	77
210	15	19	24	30	34	38	44	48	53	58	63	67	74	74	81	81
220	15	20	25	31	36	40	46	50	56	60	66	70	77	77	85	85
230	16	21	26	32	37	42	49	53	58	63	69	73	81	81	89	89
240	17	22	27	34	39	44	51	55	61	66	72	76	84	84	93	93
250	18	23	28	35	40	46	53	57	63	69	75	79	88	88	97	97
260	18	24	29	37	42	48	55	59	66	71	78	82	92	92	101	101
270	19	25	30	38	44	49	57	62	68	74	81	86	95	95	105	105
280	20	26	32	39	45	51	59	64	71	77	84	89	99	99	108	108
290	20	27	33	41	47	53	61	66	73	80	87	92	102	102	112	112
300	21	27	34	42	49	55	63	69	76	82	90	95	106	106	116	116
320	23	29	36	45	52	59	68	73	81	88	96	101	113	113	124	124
340	24	31	38	48	55	62	72	78	86	93	102	108	120	120	132	132
360	25	33	41	51	58	66	76	82	91	99	108	114	127	127	139	139
380	27	35	43	54	62	70	80	87	96	104	114	120	134	134	147	147
400	28	37	45	56	65	73	84	92	101	110	120	127	141	141	155	155
425	30	39	48	60	69	78	90	97	108	117	127	135	150	150	165	165
450	32	41	51	63	73	82	95	103	114	124	135	143	158	158	174	174
475	33	43	54	67	77	87	101	110	122	133	144	152	168	168	185	185
500	35	46	56	70	81	92	106	114	127	137	150	158	176	176	194	194
525	37	48	59	74	85	96	111	120	133	144	157	166	185	185	203	203
550	39	50	62	77	89	101	116	126	139	151	165	174	194	194	213	213
575	40	53	65	81	93	105	121	132	146	158	172	182	202	202	223	223
600	42	55	68	84	97	110	127	137	152	165	180	190	211	211	232	232

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		48												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100	7	9	11	14	16	18	21	23	25	27	30	32	35	39	42
110	8	10	12	15	18	20	23	25	28	30	33	35	39	43	46
120	8	11	14	17	19	22	25	27	30	33	36	38	42	46	51
130	9	12	15	18	21	24	27	30	33	36	39	41	46	50	55
140	10	13	16	20	23	26	30	32	35	38	42	44	49	54	59
150	11	14	17	21	24	27	32	34	38	41	45	48	53	58	63
160	11	15	18	23	26	29	34	37	41	44	48	51	56	62	68
170	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
180	13	16	20	25	29	33	38	41	46	49	54	57	63	70	76
190	13	17	21	27	31	35	40	43	48	52	57	60	67	74	80
200	14	18	23	28	32	37	42	46	51	55	60	63	70	77	84
210	15	19	24	30	34	38	44	48	53	58	63	67	74	81	89
220	15	20	25	31	36	40	46	50	56	60	66	70	77	85	93
230	16	21	26	32	37	42	49	53	58	63	69	73	81	89	97
240	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
250	18	23	28	35	40	46	53	57	63	69	75	79	88	97	106
260	18	24	29	37	42	48	55	59	66	71	78	82	92	101	110
270	19	25	30	38	44	49	57	62	68	74	81	86	95	105	114
280	20	26	32	39	45	51	59	64	71	77	84	89	99	108	118
290	20	27	33	41	47	53	61	66	73	80	87	92	102	112	122
300	21	27	34	42	49	55	63	69	76	82	90	95	106	116	127
320	23	29	36	45	52	59	68	73	81	88	96	101	113	124	135
340	24	31	38	48	55	62	72	78	86	93	102	108	120	132	144
360	25	33	41	51	58	66	76	82	91	99	108	114	127	139	152
380	27	35	43	54	62	70	80	87	96	104	114	120	134	147	161
400	28	37	45	56	65	73	84	92	101	110	120	127	141	155	169
425	30	39	48	60	69	78	90	97	108	117	127	135	150	165	180
450	32	41	51	63	73	82	95	103	114	124	135	143	158	174	190
475	33	43	54	67	77	87	100	109	120	130	142	150	167	184	201
500	35	46	56	70	81	92	106	114	127	137	150	158	176	194	211
525	37	48	59	74	85	96	111	120	133	144	157	166	185	203	222
550	39	50	62	77	89	101	116	126	139	151	165	174	194	213	232
575	40	53	65	81	93	105	121	132	146	158	172	182	202	223	243
600	42	55	68	84	97	110	127	137	152	165	180	190	211	232	253
650	46	59	73	92	105	119	137	149	165	178	194	206	229	252	275
700	49	64	79	99	113	128	148	160	177	192	209	222	246	271	296
750	53	69	84	106	121	137	158	172	190	206	224	238	264	290	
800	56	73	90	113	130	146	169	183	203	220	239	253	282		
850	60	78	96	120	138	156	180	194	215	233	254	269	299		
900	63	82	101	127	146	165	190	206	228	247	269	285			
950	67	87	107	134	154	174	201	217	241	261	284				
1000	70	92	113	141	162	183	211	229	253	275	299				

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		49												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100	7	9	11	14	16	18	21	22	25	27	29	31	34	38	41
110	8	10	12	15	17	20	23	25	27	30	32	34	38	42	46
120	8	11	13	17	19	22	25	27	30	32	35	38	40	45	49
130	9	12	14	18	21	23	27	29	32	35	38	40	45	49	54
140	10	13	15	19	22	25	29	31	35	38	41	43	48	53	58
150	10	13	17	21	24	27	31	34	37	40	44	47	52	57	62
160	11	14	18	22	25	29	33	36	40	43	47	50	55	61	66
170	12	15	19	23	27	30	35	38	42	46	50	53	59	64	70
180	12	16	20	25	29	32	37	40	45	48	53	56	62	68	74
190	13	17	21	26	30	34	39	43	47	51	56	59	66	72	79
200	14	18	22	28	32	36	41	45	50	54	59	62	69	76	83
210	14	19	23	29	33	38	43	47	52	56	62	65	72	80	87
220	15	20	24	30	35	39	46	49	55	59	64	68	76	83	91
230	16	21	25	32	36	41	48	52	57	62	67	71	79	87	95
240	17	22	26	33	38	43	50	54	60	65	70	74	83	91	99
250	17	22	28	34	40	45	52	56	62	67	73	78	86	95	103
260	18	23	29	36	41	47	54	58	65	70	76	81	90	99	108
270	19	24	30	37	43	48	56	61	67	73	79	84	93	102	112
280	19	25	31	39	44	50	58	63	70	75	82	87	97	106	116
290	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
300	21	27	33	41	48	54	62	67	74	81	88	93	103	114	124
320	22	29	35	44	51	57	66	72	79	86	94	99	110	121	132
340	23	30	38	47	54	61	70	76	84	91	100	106	117	129	141
360	25	32	40	50	57	65	74	81	89	97	106	112	124	137	149
380	26	34	42	52	60	68	79	85	94	102	111	118	131	144	157
400	28	36	44	55	63	72	83	90	99	108	117	124	138	152	166
425	29	38	47	59	67	76	88	95	106	114	125	132	147	161	176
450	31	40	50	62	71	81	93	101	112	121	132	140	155	171	186
475	33	43	52	66	75	85	98	106	118	128	139	147	164	180	197
500	34	45	55	69	79	90	103	112	124	134	147	155	172	190	207
525	36	47	58	72	83	94	109	118	130	141	154	163	181	199	217
550	38	49	61	76	87	99	114	123	137	148	161	171	190	209	228
575	40	52	63	79	91	103	119	129	143	155	169	178	198	218	238
600	41	54	66	83	95	108	124	134	149	161	176	186	207	228	248
650	45	58	72	90	103	117	134	146	161	175	191	202	224	247	269
700	48	63	77	97	111	126	145	157	174	188	205	217	241	265	290
750	52	67	83	103	119	134	155	168	186	202	220	233	259	284	
800	55	72	88	110	127	143	166	179	199	215	234	248	276		
850	59	76	94	117	135	152	176	191	211	229	249	264	293		
900	62	81	99	124	143	161	186	202	223	242	264	279			
950	66	85	105	131	151	170	197	213	236	255	278	295			
1000	69	90	110	138	159	179	207	224	248	269	293				

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		50												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
110	7	10	12	15	17	19	22	24	27	29	32	33	37	41	45
120	8	11	13	16	19	21	24	26	29	32	34	36	41	45	49
130	9	11	14	18	20	23	26	29	32	34	37	40	44	48	53
140	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
150	10	13	16	20	23	26	30	33	36	40	43	46	51	56	61
160	11	14	17	22	25	28	32	35	39	42	46	49	54	59	65
170	11	15	18	23	26	30	34	37	41	45	49	52	57	63	69
180	12	16	19	24	28	32	36	40	44	47	52	55	61	67	73
190	13	17	21	26	30	33	39	42	46	50	55	58	64	71	77
200	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
210	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
220	15	19	24	30	34	39	45	48	54	58	63	67	74	82	89
230	16	20	25	31	36	40	47	51	56	61	66	70	78	85	93
240	16	21	26	32	37	42	49	53	58	63	69	73	81	89	97
250	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
260	18	23	28	35	40	46	53	57	63	69	75	79	88	97	105
270	18	24	29	36	42	47	55	59	66	71	78	82	91	100	109
280	19	25	30	38	44	49	57	61	68	74	80	85	95	104	114
290	20	25	31	39	45	51	59	64	71	76	83	88	98	108	118
300	20	26	32	41	47	53	61	66	73	79	86	91	101	112	122
320	22	28	35	43	50	56	65	70	78	84	92	97	108	119	130
340	23	30	37	46	53	60	69	75	83	90	98	103	115	126	138
360	24	32	39	49	56	63	73	79	88	95	103	109	122	134	146
380	26	33	41	51	59	67	77	83	92	100	109	116	128	141	154
400	27	35	43	54	62	70	81	88	97	105	115	122	135	149	162
425	29	37	46	57	66	75	86	93	103	112	122	129	144	158	172
450	30	40	49	61	70	79	91	99	109	119	129	137	152	167	182
475	32	42	51	64	74	83	96	104	116	125	136	144	161	177	193
500	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
525	35	46	57	71	82	92	106	115	128	138	151	160	177	195	213
550	37	48	59	74	85	97	112	121	134	145	158	167	186	204	223
575	39	51	62	78	89	101	117	126	140	152	165	175	194	214	233
600	41	53	65	81	93	105	122	132	146	158	172	182	203	223	243
650	44	57	70	88	101	114	132	143	158	171	187	198	220	242	264
700	47	61	76	95	109	123	142	154	170	184	201	213	237	260	284
750	51	66	81	101	117	132	152	165	182	198	215	228	253	279	
800	54	70	87	108	124	141	162	176	195	211	230	243	270	297	
850	57	75	92	115	132	149	172	187	207	224	244	258	287		
900	61	79	97	122	140	158	182	198	219	237	258	274			
950	64	83	103	128	148	167	193	209	231	250	273	289			
1000	68	88	108	135	155	176	203	220	243	264	287				

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		55												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100	6	8	10	12	14	16	18	20	22	24	26	28	31	34	37
110	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
120	7	10	12	15	17	19	22	24	27	29	31	33	37	41	44
130	8	10	13	16	18	21	24	26	29	31	34	36	40	44	48
140	9	11	14	17	20	22	26	28	31	34	37	39	43	47	52
150	9	12	15	18	21	24	28	30	33	36	39	41	46	51	55
160	10	13	16	20	23	26	29	32	35	38	42	44	49	54	59
170	10	14	17	21	24	27	31	34	38	41	44	47	52	57	63
180	11	14	18	22	25	29	33	36	40	43	47	50	55	61	66
190	12	15	19	23	27	30	35	38	42	46	50	53	58	64	70
200	12	16	20	25	28	32	37	40	44	48	52	55	61	68	74
210	13	17	21	26	30	34	39	42	46	50	55	58	65	71	77
220	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
230	14	18	23	28	33	37	42	46	51	55	60	64	71	78	85
240	15	19	24	29	34	38	44	48	53	58	63	66	74	81	88
250	15	20	25	31	35	40	46	50	55	60	65	69	77	84	92
260	16	21	26	32	37	42	48	52	58	62	68	72	80	88	96
270	17	22	27	33	38	43	50	54	60	65	70	75	83	91	100
280	17	22	28	34	40	45	52	56	62	67	73	77	86	95	103
290	18	23	29	36	41	46	53	58	64	69	76	80	89	98	107
300	18	24	29	37	42	48	55	60	66	72	78	83	92	101	111
320	20	26	31	39	45	51	59	64	71	77	84	88	98	108	118
340	21	27	33	42	48	54	63	68	75	81	89	94	104	115	125
360	22	29	35	44	51	58	66	72	80	86	94	100	111	122	133
380	23	30	37	47	54	61	70	76	84	91	99	105	117	128	140
400	25	32	39	49	57	64	74	80	88	96	104	111	123	135	147
425	26	34	42	52	60	68	78	85	94	102	111	117	131	144	157
450	28	36	44	55	64	72	83	90	100	108	117	124	138	152	166
475	29	38	47	58	67	76	88	95	105	114	124	131	146	161	175
500	31	40	49	61	71	80	92	100	111	120	131	138	154	169	184
525	32	42	52	65	74	84	97	105	116	126	137	145	161	177	194
550	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
575	35	46	57	71	81	92	106	115	127	138	150	159	177	194	212
600	37	48	59	74	85	96	111	120	133	144	157	166	184	203	221
650	40	52	64	80	92	104	120	130	144	156	170	180	200	220	240
700	43	56	69	86	99	112	129	140	155	168	183	194	215	237	258
750	46	60	74	92	106	120	138	150	166	180	196	207	230	253	276
800	49	64	79	98	113	128	147	160	177	192	209	221	246	270	295
850	52	68	84	104	120	136	157	170	188	204	222	235	261	287	
900	55	72	88	111	127	144	166	180	199	216	235	249	276		
950	58	76	93	117	134	152	175	190	210	228	248	263	292		
1000	61	80	98	123	141	160	184	200	221	240	261	276			

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		60												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100		7	9	11	13	15	17	18	20	22	24	25	28	31	34
110	6	8	10	12	14	16	19	20	22	24	26	28	31	34	37
120	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
130	7	10	12	15	17	19	22	24	26	29	31	33	37	40	44
140	8	10	13	16	18	20	24	26	28	31	34	35	39	43	47
150	8	11	14	17	19	22	25	27	30	33	36	38	42	46	51
160	9	12	14	18	21	23	27	29	32	35	38	41	45	50	54
170	10	12	15	19	22	25	29	31	34	37	41	43	48	53	57
180	10	13	16	20	23	26	30	33	36	40	43	46	51	56	61
190	11	14	17	21	25	28	32	35	39	42	45	48	54	59	64
200	11	15	18	23	26	29	34	37	41	44	48	51	56	62	68
210	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
220	12	16	20	25	28	32	37	40	45	48	53	56	62	68	74
230	13	17	21	26	30	34	39	42	47	51	55	58	65	71	78
240	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
250	14	18	23	28	32	37	42	46	51	55	60	63	70	77	84
260	15	19	23	29	34	38	44	48	53	57	62	66	73	81	88
270	15	20	24	30	35	40	46	49	55	59	65	68	76	84	91
280	16	20	25	32	36	41	47	51	57	61	67	71	79	87	95
290	16	21	26	33	38	42	49	53	59	64	69	73	82	90	98
300	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
320	18	23	29	36	41	47	54	59	65	70	77	81	90	99	108
340	19	25	31	38	44	50	57	62	69	75	81	86	96	105	115
360	20	26	32	41	47	53	61	66	73	79	86	91	101	112	122
380	21	28	34	43	49	56	64	70	77	83	91	96	107	118	128
400	23	29	36	45	52	59	68	73	81	88	96	101	113	124	135
425	24	31	38	48	55	62	72	78	86	93	102	108	120	132	144
450	25	33	41	51	58	66	76	82	91	99	108	114	127	139	152
475	27	35	43	54	62	70	80	87	96	104	114	120	134	147	161
500	28	37	45	56	65	73	84	92	101	110	120	127	141	155	169
525	30	38	47	59	68	77	89	96	106	115	126	133	148	163	177
550	31	40	50	62	71	81	93	101	112	121	132	139	155	170	186
575	32	42	52	65	74	84	97	105	117	126	138	146	162	178	194
600	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
650	37	48	59	73	84	95	110	119	132	143	156	165	183	201	220
700	39	51	63	79	91	102	118	128	142	154	168	177	197	217	237
750	42	55	68	84	97	110	127	137	152	165	180	190	211	232	253
800	45	59	72	90	104	117	135	146	162	176	191	203	225	248	270
850	48	62	77	96	110	124	144	156	172	187	203	215	239	263	287
900	51	66	81	101	117	132	152	165	182	198	215	228	253	279	
950	54	70	86	107	123	139	161	174	193	209	227	241	268	294	
1000	56	73	90	113	130	146	169	183	203	220	239	253	282		

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		65												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100		7	8	10	12	14	16	17	19	20	22	23	26	29	31
110		7	9	11	13	15	17	19	21	22	24	26	29	31	34
120	6	8	10	12	14	16	19	20	22	24	27	28	31	34	37
130	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
140	7	9	12	15	17	19	22	24	26	28	31	33	36	40	44
150	8	10	12	16	18	20	23	25	28	30	33	35	39	43	47
160	8	11	13	17	19	22	25	27	30	32	35	37	42	46	50
170	9	11	14	18	20	23	27	29	32	34	38	40	44	49	53
180	9	12	15	19	22	24	28	30	34	36	40	42	47	51	56
190	10	13	16	20	23	26	30	32	36	39	42	44	49	54	59
200	10	14	17	21	24	27	31	34	37	41	44	47	52	57	62
210	11	14	17	22	25	28	33	35	39	43	46	49	55	60	66
220	11	15	18	23	26	30	34	37	41	45	49	51	57	63	69
230	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
240	12	16	20	25	29	32	37	41	45	49	53	56	62	69	75
250	13	17	21	26	30	34	39	42	47	51	55	58	65	71	78
260	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
270	14	18	22	28	32	36	42	46	51	55	60	63	70	77	84
280	15	19	23	29	33	38	44	47	52	57	62	66	73	80	87
290	15	20	24	30	35	39	45	49	54	59	64	68	75	83	90
300	16	20	25	31	36	41	47	51	56	61	66	70	78	86	94
320	17	22	27	33	38	43	50	54	60	65	71	75	83	91	100
340	18	23	28	35	41	46	53	57	64	69	75	80	88	97	106
360	19	24	30	37	43	49	56	61	67	73	80	84	94	103	112
380	20	26	32	40	45	51	59	64	71	77	84	89	99	109	119
400	21	27	33	42	48	54	62	68	75	81	88	94	104	114	125
425	22	29	35	44	51	57	66	72	80	86	94	99	110	122	133
450	23	30	37	47	54	61	70	76	84	91	99	105	117	129	140
475	25	32	40	49	57	64	74	80	89	96	105	111	123	136	148
500	26	34	42	52	60	68	78	84	94	101	110	117	130	143	156
525	27	35	44	55	63	71	82	89	98	106	116	123	136	150	164
550	29	37	46	57	66	74	86	93	103	112	122	129	143	157	172
575	30	39	48	60	69	78	90	97	108	117	127	135	149	164	179
600	31	41	50	62	72	81	94	101	112	122	133	140	156	172	187
650	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
700	36	47	58	73	84	95	109	118	131	142	155	164	182	200	218
750	39	51	62	78	90	101	117	127	140	152	166	175	195	214	234
800	42	54	67	83	96	108	125	135	150	162	177	187	208	229	250
850	44	57	71	88	102	115	133	144	159	172	188	199	221	243	265
900	47	61	75	94	108	122	140	152	168	182	199	211	234	257	281
950	49	64	79	99	114	128	148	161	178	193	210	222	247	272	296
1000	52	68	83	104	120	135	156	169	187	203	221	234	260	286	

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		70												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100		6	8	10	11	13	14	16	17	19	21	22	24	27	29
110		7	8	11	12	14	16	17	19	21	23	24	27	29	32
120		8	9	12	13	15	17	19	21	23	25	26	29	32	35
130	6	8	10	13	14	16	19	20	23	24	27	28	31	35	38
140	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
150	7	9	12	14	17	19	22	24	26	28	31	33	36	40	43
160	8	10	12	15	18	20	23	25	28	30	33	35	39	42	46
170	8	11	13	16	19	21	25	27	30	32	35	37	41	45	49
180	9	11	14	17	20	23	26	28	31	34	37	39	43	48	52
190	9	12	15	18	21	24	28	30	33	36	39	41	46	50	55
200	10	13	15	19	22	25	29	31	35	38	41	43	48	53	58
210	10	13	16	20	23	26	30	33	36	40	43	46	51	56	61
220	11	14	17	21	24	28	32	35	38	41	45	48	53	58	64
230	11	14	18	22	26	29	33	36	40	43	47	50	56	61	67
240	12	15	19	23	27	30	35	38	42	45	49	52	58	64	70
250	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
260	13	16	20	25	29	33	38	41	45	49	53	56	63	69	75
270	13	17	21	26	30	34	39	42	47	51	55	59	65	72	78
280	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
290	14	18	22	28	32	36	42	45	50	55	59	63	70	77	84
300	14	19	23	29	33	38	43	47	52	56	62	65	72	80	87
320	15	20	25	31	36	40	46	50	56	60	66	70	77	85	93
340	16	21	26	33	38	43	49	53	59	64	70	74	82	90	98
360	17	23	28	35	40	45	52	56	63	68	74	78	87	96	104
380	18	24	29	37	42	48	55	60	66	72	78	83	92	101	110
400	19	25	31	39	44	50	58	63	70	75	82	87	97	106	116
425	21	27	33	41	47	53	62	67	74	80	87	92	103	113	123
450	22	28	35	43	50	56	65	71	78	85	92	98	109	119	130
475	23	30	37	46	53	60	69	75	83	89	97	103	115	126	138
500	24	31	39	48	56	63	72	78	87	94	103	109	121	133	145
525	25	33	41	51	58	66	76	82	91	99	108	114	127	139	152
550	27	35	42	53	61	69	80	86	96	104	113	119	133	146	159
575	28	36	44	56	64	72	83	90	100	108	118	125	139	153	167
600	29	38	46	58	67	75	87	94	104	113	123	130	145	159	174
650	31	41	50	63	72	82	94	102	113	122	133	141	157	173	188
700	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
750	36	47	58	72	83	94	109	118	130	141	154	163	181	199	217
800	39	50	62	77	89	100	116	126	139	151	164	174	193	212	232
850	41	53	66	82	94	107	123	133	148	160	174	185	205	226	246
900	43	56	70	87	100	113	130	141	156	169	185	196	217	239	261
950	46	60	73	92	105	119	138	149	165	179	195	206	229	252	275
1000	48	63	77	97	111	126	145	157	174	188	205	217	241	265	290

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		75												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100			7	9	10	12	14	15	16	18	19	20	23	25	27
110		6	8	10	11	13	15	16	18	19	21	22	25	27	30
120		7	9	11	12	14	16	18	19	21	23	24	27	30	32
130		8	9	12	13	15	18	19	21	23	25	26	29	32	35
140	6	8	10	13	15	16	19	20	23	25	27	28	32	35	38
150	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
160	7	9	12	14	17	19	22	23	26	28	31	32	36	40	43
170	8	10	12	15	18	20	23	25	28	30	33	34	38	42	46
180	8	11	13	16	19	21	24	26	29	32	34	36	41	45	49
190	9	11	14	17	20	22	26	28	31	33	36	39	43	47	51
200	9	12	14	18	21	23	27	29	32	35	38	41	45	50	54
210	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
220	10	13	16	20	23	26	30	32	36	39	42	45	50	55	59
230	10	13	17	21	24	27	31	34	37	40	44	47	52	57	62
240	11	14	17	22	25	28	32	35	39	42	46	49	54	59	65
250	11	15	18	23	26	29	34	37	41	44	48	51	56	62	68
260	12	15	19	23	27	30	35	38	42	46	50	53	59	64	70
270	12	16	19	24	28	32	36	40	44	47	52	55	61	67	73
280	13	16	20	25	29	33	38	41	45	49	54	57	63	69	76
290	13	17	21	26	30	34	39	42	47	51	56	59	65	72	78
300	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
320	14	19	23	29	33	37	43	47	52	56	61	65	72	79	87
340	15	20	25	31	35	40	46	50	55	60	65	69	77	84	92
360	16	21	26	32	37	42	49	53	58	63	69	73	81	89	97
380	17	22	27	34	39	45	51	56	62	67	73	77	86	94	103
400	18	23	29	36	41	47	54	59	65	70	77	81	90	99	108
425	19	25	31	38	44	50	57	62	69	75	81	86	96	105	115
450	20	26	32	41	47	53	61	66	73	79	86	91	101	112	122
475	21	28	34	43	49	56	64	70	77	83	91	96	107	118	128
500	23	29	36	45	52	59	68	73	81	88	96	101	113	124	135
525	24	31	38	47	54	61	71	77	85	92	101	106	118	130	142
550	25	32	40	50	57	64	74	81	89	97	105	112	124	136	149
575	26	34	41	52	60	67	78	84	93	101	110	117	130	142	155
600	27	35	43	54	62	70	81	88	97	105	115	122	135	149	162
650	29	38	47	59	67	76	88	95	105	114	124	132	146	161	176
700	32	41	50	63	73	82	95	102	114	123	134	142	158	173	189
750	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
800	36	47	58	72	83	94	109	118	130	141	153	162	180	198	216
850	38	50	61	77	88	100	115	124	138	149	163	172	191	211	230
900	41	53	65	81	93	105	122	132	146	158	172	182	203	223	243
950	43	56	68	86	98	111	128	139	154	167	182	193	214	235	257
1000	45	59	72	90	104	117	135	146	162	176	191	203	225	248	270

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		80												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100			7	8	10	11	13	14	15	16	18	19	21	23	25
110		6	7	9	11	12	14	15	17	18	20	21	23	26	28
120		7	8	10	12	13	15	16	18	20	22	23	25	28	30
130		7	9	11	13	14	16	18	20	21	23	25	27	30	33
140		8	9	12	14	15	18	19	21	23	25	27	30	33	35
150	6	8	10	13	15	16	19	21	23	25	27	29	32	35	38
160	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
170	7	9	11	14	17	19	22	23	26	28	31	32	36	39	43
180	8	10	12	15	17	20	23	25	27	30	32	34	38	42	46
190	8	10	13	16	18	21	24	26	29	31	34	36	40	44	48
200	8	11	14	17	19	22	25	27	30	33	36	38	42	46	51
210	9	12	14	18	20	23	27	29	32	35	38	40	44	49	53
220	9	12	15	19	21	24	28	30	33	36	39	42	46	51	56
230	10	13	16	19	22	25	29	32	35	38	41	44	49	53	58
240	10	13	16	20	23	26	30	33	36	40	43	46	51	56	61
250	11	14	17	21	24	27	32	34	38	41	45	48	53	58	63
260	11	14	18	22	25	29	33	36	40	43	47	49	55	60	66
270	11	15	18	23	26	30	34	37	41	44	48	51	57	63	68
280	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
290	12	16	20	24	28	32	37	40	44	48	52	55	61	67	73
300	13	16	20	25	29	33	38	41	46	49	54	57	63	70	76
320	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
340	14	19	23	29	33	37	43	47	52	56	61	65	72	79	86
360	15	20	24	30	35	40	46	49	55	59	65	68	76	84	91
380	16	21	26	32	37	42	48	52	58	63	68	72	80	88	96
400	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
425	18	23	29	36	41	47	54	58	65	70	76	81	90	99	108
450	19	25	30	38	44	49	57	62	68	74	81	86	95	105	114
475	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
500	21	27	34	42	49	55	63	69	76	82	90	95	106	116	127
525	22	29	35	44	51	58	67	72	80	86	94	100	111	122	133
550	23	30	37	46	53	60	70	76	84	91	99	105	116	128	139
575	24	32	39	49	56	63	73	79	87	95	103	109	121	134	146
600	25	33	41	51	58	66	76	82	91	99	108	114	127	139	152
650	27	36	44	55	63	71	82	89	99	107	117	124	137	151	165
700	30	38	47	59	68	77	89	96	106	115	126	133	148	163	177
750	32	41	51	63	73	82	95	103	114	124	135	143	158	174	190
800	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
850	36	47	57	72	83	93	108	117	129	140	153	162	180	197	215
900	38	49	61	76	87	99	114	124	137	148	162	171	190	209	228
950	40	52	64	80	92	104	120	130	144	156	171	181	201	221	241
1000	42	55	68	84	97	110	127	137	152	165	180	190	211	232	253

Gear Box...Med. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		90												Figures in body of chart = mm of door opening	
Width	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
100				6	8	9	10	11	12	14	15	16	17	19	21
110				7	8	9	11	12	13	15	16	18	19	21	23
120				7	9	10	12	14	15	16	18	19	20	23	25
130		6	8	10	11	13	15	16	18	19	21	22	24	27	29
140		7	8	11	12	14	16	17	19	20	22	24	26	29	32
150		7	9	11	13	15	17	18	20	22	24	25	28	31	34
160	6	8	10	12	14	16	18	20	22	23	26	27	30	33	36
170	6	8	10	13	15	17	19	21	23	25	27	29	32	35	38
180	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
190	7	9	11	14	16	19	21	23	26	28	30	32	36	39	43
200	8	10	12	15	17	20	23	24	27	29	32	34	38	41	45
210	8	10	13	16	18	20	24	26	28	31	34	35	39	43	47
220	8	11	13	17	19	21	25	27	30	32	35	37	41	45	50
230	9	11	14	17	20	22	26	28	31	34	37	39	43	47	52
240	9	12	14	18	21	23	27	29	32	35	38	41	45	50	54
250	9	12	15	19	22	24	28	31	34	37	40	42	47	52	56
260	10	13	16	20	22	25	29	32	35	38	41	44	49	54	59
270	10	13	16	20	23	26	30	33	36	40	43	46	51	56	61
280	11	14	17	21	24	27	32	34	38	41	45	47	53	58	63
290	11	14	17	22	25	28	33	35	39	42	46	49	54	60	65
300	11	15	18	23	26	29	34	37	41	44	48	51	56	62	68
320	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
340	13	17	20	26	29	33	38	41	46	50	54	57	64	70	77
360	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
380	14	19	23	29	33	37	43	46	51	56	61	64	71	78	86
400	15	20	24	30	35	39	45	49	54	59	64	68	75	83	90
425	16	21	26	32	37	41	48	52	57	62	68	72	80	88	96
450	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
475	18	23	29	36	41	46	54	58	64	70	76	80	89	98	107
500	19	24	30	38	43	49	56	61	68	73	80	84	94	103	113
525	20	26	32	39	45	51	59	64	71	77	84	89	99	108	118
550	21	27	33	41	47	54	62	67	74	81	88	93	103	114	124
575	22	28	35	43	50	56	65	70	78	84	92	97	108	119	130
600	23	29	36	45	52	59	68	73	81	88	96	101	113	124	135
650	24	32	39	49	56	63	73	79	88	95	104	110	122	134	146
700	26	34	42	53	60	68	79	85	95	102	112	118	131	145	158
750	28	37	45	56	65	73	84	92	101	110	120	127	141	155	169
800	30	39	48	60	69	78	90	98	108	117	128	135	150	165	180
850	32	41	51	64	73	83	96	104	115	124	136	144	160	176	191
900	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
950	36	46	57	71	82	93	107	116	128	139	152	161	178	196	214
1000	38	49	60	75	86	98	113	122	135	146	160	169	188	206	225

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use

... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE.													Standard Duty 607091+44t
Density..LB Cu.Ft. ...		45.00													Figures in body of chart = mm of door opening
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500	11	14	17	21	24	27	32	34	38	41	45	47	53	58	63
525	11	14	18	22	25	29	33	36	40	43	47	50	55	61	66
550	12	15	19	23	27	30	35	38	42	45	49	52	58	64	69
575	12	16	19	24	28	31	36	39	44	47	51	54	60	67	73
600	13	16	20	25	29	33	38	41	45	49	54	57	63	69	76
625	13	17	21	26	30	34	39	43	47	51	56	59	66	72	79
650	14	18	22	27	31	36	41	44	49	53	58	62	68	75	82
675	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
700	15	19	24	29	34	38	44	48	53	57	63	66	74	81	88
750	16	21	25	32	36	41	47	51	57	62	67	71	79	87	95
800	17	22	27	34	39	44	50	55	61	66	72	76	84	93	101
850	18	23	29	36	41	46	54	58	64	70	76	80	89	98	107
900	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
950	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
1000	21	27	34	42	48	55	63	68	76	82	89	95	105	116	126
1050	22	29	35	44	51	57	66	72	79	86	94	99	110	121	132
1100	23	30	37	46	53	60	69	75	83	90	98	104	116	127	139
1150	24	31	39	48	56	63	73	79	87	94	103	109	121	133	145
1200	25	33	40	50	58	66	76	82	91	98	107	114	126	139	151
1250	26	34	42	53	60	68	79	85	95	103	112	118	131	145	158
1300	27	36	44	55	63	71	82	89	98	107	116	123	137	150	164
1350	28	37	45	57	65	74	85	92	102	111	121	128	142	156	170
1400	29	38	47	59	68	77	88	96	106	115	125	132	147	162	177
1450	30	40	49	61	70	79	91	99	110	119	130	137	152	168	183
1500	32	41	50	63	73	82	95	103	114	123	134	142	158	174	189
1550	33	42	52	65	75	85	98	106	117	127	139	147	163	179	196
1600	34	44	54	67	77	87	101	109	121	131	143	151	168	185	202
1650	35	45	56	69	80	90	104	113	125	135	147	156	174	191	208
1700	36	46	57	72	82	93	107	116	129	139	152	161	179	197	215
1800	38	49	61	76	87	98	114	123	136	148	161	170	189	208	227
1900	40	52	64	80	92	104	120	130	144	156	170	180	200	220	240
2000	42	55	67	84	97	109	126	137	151	164	179	189	210	231	252
2500	53	68	84	105	121	137	158	171	189	205	223	237	263	289	
3000	63	82	101	126	145	164	189	205	227	246	268	284			
3500	74	96	118	147	169	191	221	239	265	287					
4000	84	109	135	168	193	219	252	273							
5000	105	137	168	210	242	273									
6000	126	164	202	252	290										
7000	147	191	236	294											
8000	168	219	269												
9000	189	246													
10000	210	273													

Gear Box...High. Gear		RATE CHART LB. PER ACRE.													Standard Duty 607091+44t
Density..LB Cu.Ft. ...		50													Figures in body of chart = mm of door opening
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
525	10	13	16	20	23	26	30	32	36	39	42	45	50	55	60
550	10	14	17	21	24	27	31	34	37	41	44	47	52	57	62
575	11	14	17	22	25	28	33	35	39	42	46	49	54	60	65
600	11	15	18	23	26	30	34	37	41	44	48	51	57	62	68
625	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
650	12	16	20	25	28	32	37	40	44	48	52	55	62	68	74
675	13	17	20	26	29	33	38	42	46	50	54	57	64	70	77
700	13	17	21	26	30	34	40	43	48	52	56	60	66	73	79
750	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
800	15	20	24	30	35	39	45	49	55	59	64	68	76	83	91
850	16	21	26	32	37	42	48	52	58	63	68	72	80	88	97
900	17	22	27	34	39	44	51	55	61	66	72	77	85	94	102
950	18	23	29	36	41	47	54	58	65	70	76	81	90	99	108
1000	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1050	20	26	32	40	46	52	60	65	72	78	84	89	99	109	119
1100	21	27	33	42	48	54	62	68	75	81	88	94	104	115	125
1150	22	28	35	44	50	57	65	71	78	85	93	98	109	120	131
1200	23	30	36	45	52	59	68	74	82	89	97	102	114	125	136
1250	24	31	38	47	54	62	71	77	85	92	101	106	118	130	142
1300	25	32	39	49	57	64	74	80	89	96	105	111	123	135	148
1350	26	33	41	51	59	66	77	83	92	100	109	115	128	141	153
1400	26	34	42	53	61	69	79	86	95	103	113	119	132	146	159
1450	27	36	44	55	63	71	82	89	99	107	117	124	137	151	165
1500	28	37	45	57	65	74	85	92	102	111	121	128	142	156	170
1550	29	38	47	59	67	76	88	95	106	114	125	132	147	161	176
1600	30	39	48	61	70	79	91	98	109	118	129	136	151	167	182
1650	31	41	50	62	72	81	94	102	112	122	133	141	156	172	187
1700	32	42	51	64	74	84	97	105	116	125	137	145	161	177	193
1800	34	44	55	68	78	89	102	111	123	133	145	153	170	187	204
1900	36	47	58	72	83	94	108	117	129	140	153	162	180	198	216
2000	38	49	61	76	87	98	114	123	136	148	161	170	189	208	227
2500	47	62	76	95	109	123	142	154	170	185	201	213	237	260	284
3000	57	74	91	114	131	148	170	185	204	221	241	256	284		
3500	66	86	106	132	152	172	199	215	238	258	282	298			
4000	76	98	121	151	174	197	227	246	273	295					
5000	95	123	151	189	218	246	284								
6000	114	148	182	227	261	295									
7000	132	172	212	265											
8000	151	197	242												
9000	170	221	273												
10000	189	246													

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE.													Standard Duty 607091+44t
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Rate	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
500	9	11	14	17	20	22	26	28	31	34	37	39	43	47	52
525	9	12	14	18	21	23	27	29	33	35	38	41	45	50	54
550	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
575	10	13	16	20	23	26	30	32	36	39	42	45	49	54	59
600	10	13	17	21	24	27	31	34	37	40	44	46	52	57	62
625	11	14	17	22	25	28	32	35	39	42	46	48	54	59	65
650	11	15	18	22	26	29	34	36	40	44	48	50	56	62	67
675	12	15	19	23	27	30	35	38	42	45	49	52	58	64	70
700	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
750	13	17	21	26	30	34	39	42	46	50	55	58	65	71	77
800	14	18	22	28	32	36	41	45	50	54	59	62	69	76	83
850	15	19	23	29	34	38	44	48	53	57	62	66	73	80	88
900	15	20	25	31	36	40	46	50	56	60	66	70	77	85	93
950	16	21	26	33	38	43	49	53	59	64	69	74	82	90	98
1000	17	22	28	34	40	45	52	56	62	67	73	77	86	95	103
1050	18	23	29	36	42	47	54	59	65	70	77	81	90	99	108
1100	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1150	20	26	32	40	46	51	59	64	71	77	84	89	99	109	119
1200	21	27	33	41	47	54	62	67	74	81	88	93	103	114	124
1250	22	28	34	43	49	56	65	70	77	84	91	97	108	118	129
1300	22	29	36	45	51	58	67	73	81	87	95	101	112	123	134
1350	23	30	37	46	53	60	70	75	84	91	99	105	116	128	139
1400	24	31	39	48	55	63	72	78	87	94	102	108	120	132	145
1450	25	32	40	50	57	65	75	81	90	97	106	112	125	137	150
1500	26	34	41	52	59	67	77	84	93	101	110	116	129	142	155
1550	27	35	43	53	61	69	80	87	96	104	113	120	133	147	160
1600	28	36	44	55	63	72	83	89	99	107	117	124	138	151	165
1650	28	37	45	57	65	74	85	92	102	111	121	128	142	156	170
1700	29	38	47	59	67	76	88	95	105	114	124	132	146	161	176
1800	31	40	50	62	71	81	93	101	112	121	132	139	155	170	186
1900	33	43	52	65	75	85	98	106	118	128	139	147	163	180	196
2000	34	45	55	69	79	89	103	112	124	134	146	155	172	189	206
2500	43	56	69	86	99	112	129	140	155	168	183	194	215	237	258
3000	52	67	83	103	119	134	155	168	186	201	219	232	258	284	
3500	60	78	96	120	139	157	181	196	217	235	256	271			
4000	69	89	110	138	158	179	206	224	248	268	293				
5000	86	112	138	172	198	224	258	280							
6000	103	134	165	206	237	268									
7000	120	157	193	241	277										
8000	138	179	220	275											
9000	155	201	248												
10000	172	224	275												

Gear Box...High. Gear		RATE CHART LB. PER ACRE.													Standard Duty 607091+44t
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Rate	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
500	8	10	13	16	18	21	24	26	28	31	34	35	39	43	47
525	8	11	13	17	19	22	25	27	30	32	35	37	41	46	50
550	9	11	14	17	20	23	26	28	31	34	37	39	43	48	52
575	9	12	15	18	21	24	27	29	33	35	39	41	45	50	54
600	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
625	10	13	16	20	23	26	30	32	35	38	42	44	49	54	59
650	10	13	16	21	24	27	31	33	37	40	44	46	51	56	62
675	11	14	17	21	24	28	32	35	38	42	45	48	53	59	64
700	11	14	18	22	25	29	33	36	40	43	47	50	55	61	66
750	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
800	13	16	20	25	29	33	38	41	45	49	54	57	63	69	76
850	13	17	21	27	31	35	40	44	48	52	57	60	67	74	80
900	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
950	15	19	24	30	34	39	45	49	54	58	64	67	75	82	90
1000	16	21	25	32	36	41	47	51	57	62	67	71	79	87	95
1050	17	22	26	33	38	43	50	54	60	65	70	75	83	91	99
1100	17	23	28	35	40	45	52	56	62	68	74	78	87	95	104
1150	18	24	29	36	42	47	54	59	65	71	77	82	91	100	109
1200	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1250	20	26	32	39	45	51	59	64	71	77	84	89	99	108	118
1300	21	27	33	41	47	53	62	67	74	80	87	92	103	113	123
1350	21	28	34	43	49	55	64	69	77	83	90	96	106	117	128
1400	22	29	35	44	51	57	66	72	79	86	94	99	110	121	132
1450	23	30	37	46	53	59	69	74	82	89	97	103	114	126	137
1500	24	31	38	47	54	62	71	77	85	92	101	106	118	130	142
1550	24	32	39	49	56	64	73	79	88	95	104	110	122	134	147
1600	25	33	40	50	58	66	76	82	91	98	107	114	126	139	151
1650	26	34	42	52	60	68	78	85	94	102	111	117	130	143	156
1700	27	35	43	54	62	70	80	87	97	105	114	121	134	147	161
1800	28	37	45	57	65	74	85	92	102	111	121	128	142	156	170
1900	30	39	48	60	69	78	90	97	108	117	127	135	150	165	180
2000	32	41	50	63	73	82	95	103	114	123	134	142	158	174	189
2500	39	51	63	79	91	103	118	128	142	154	168	177	197	217	237
3000	47	62	76	95	109	123	142	154	170	185	201	213	237	260	284
3500	55	72	88	110	127	144	166	179	199	215	235	248	276		
4000	63	82	101	126	145	164	189	205	227	246	268	284			
5000	79	103	126	158	181	205	237	256	284						
6000	95	123	151	189	218	246	284								
7000	110	144	177	221	254	287									
8000	126	164	202	252	290										
9000	142	185	227	284											
10000	158	205	252												

For Use with [TRANSPREAD](#) Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500	7	9	12	15	17	19	22	24	26	28	31	33	36	40	44
525	8	10	12	15	18	20	23	25	28	30	32	34	38	42	46
550	8	10	13	16	18	21	24	26	29	31	34	36	40	44	48
575	8	11	13	17	19	22	25	27	30	33	36	38	42	46	50
600	9	11	14	17	20	23	26	28	31	34	37	39	44	48	52
625	9	12	15	18	21	24	27	30	33	35	39	41	46	50	55
650	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
675	10	13	16	20	23	26	29	32	35	38	42	44	49	54	59
700	10	13	16	20	23	26	31	33	37	40	43	46	51	56	61
750	11	14	17	22	25	28	33	35	39	43	46	49	55	60	66
800	12	15	19	23	27	30	35	38	42	45	50	52	58	64	70
850	12	16	20	25	28	32	37	40	45	48	53	56	62	68	74
900	13	17	21	26	30	34	39	43	47	51	56	59	66	72	79
950	14	18	22	28	32	36	41	45	50	54	59	62	69	76	83
1000	15	19	23	29	33	38	44	47	52	57	62	66	73	80	87
1050	15	20	24	31	35	40	46	50	55	60	65	69	76	84	92
1100	16	21	26	32	37	42	48	52	58	62	68	72	80	88	96
1150	17	22	27	33	39	44	50	54	60	65	71	75	84	92	100
1200	17	23	28	35	40	45	52	57	63	68	74	79	87	96	105
1250	18	24	29	36	42	47	55	59	66	71	77	82	91	100	109
1300	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1350	20	26	31	39	45	51	59	64	71	77	84	88	98	108	118
1400	20	26	33	41	47	53	61	66	73	79	87	92	102	112	122
1450	21	27	34	42	49	55	63	69	76	82	90	95	106	116	127
1500	22	28	35	44	50	57	66	71	79	85	93	98	109	120	131
1550	23	29	36	45	52	59	68	73	81	88	96	102	113	124	135
1600	23	30	37	47	54	61	70	76	84	91	99	105	116	128	140
1650	24	31	38	48	55	62	72	78	86	94	102	108	120	132	144
1700	25	32	40	50	57	64	74	80	89	97	105	111	124	136	149
1800	26	34	42	52	60	68	79	85	94	102	111	118	131	144	157
1900	28	36	44	55	64	72	83	90	100	108	118	124	138	152	166
2000	29	38	47	58	67	76	87	95	105	114	124	131	146	160	175
2500	36	47	58	73	84	95	109	118	131	142	155	164	182	200	218
3000	44	57	70	87	100	114	131	142	157	170	186	197	218	240	262
3500	51	66	82	102	117	132	153	166	183	199	217	229	255	280	
4000	58	76	93	116	134	151	175	189	210	227	248	262	291		
5000	73	95	116	146	167	189	218	237	262	284					
6000	87	114	140	175	201	227	262	284							
7000	102	132	163	204	234	265									
8000	116	151	186	233	268										
9000	131	170	210	262											
10000	146	189	233	291											

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500	7	9	11	14	16	18	20	22	24	26	29	30	34	37	41
525	7	9	11	14	16	18	21	23	26	28	30	32	35	39	43
550	7	10	12	15	17	19	22	24	27	29	32	33	37	41	45
575	8	10	12	16	18	20	23	25	28	30	33	35	39	43	47
600	8	11	13	16	19	21	24	26	29	32	34	37	41	45	49
625	8	11	14	17	19	22	25	27	30	33	36	38	42	46	51
650	9	11	14	18	20	23	26	29	32	34	37	40	44	48	53
675	9	12	15	18	21	24	27	30	33	36	39	41	46	50	55
700	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
750	10	13	16	20	23	26	30	33	37	40	43	46	51	56	61
800	11	14	17	22	25	28	32	35	39	42	46	49	54	59	65
850	11	15	18	23	26	30	34	37	41	45	49	52	57	63	69
900	12	16	19	24	28	32	37	40	44	47	52	55	61	67	73
950	13	17	21	26	30	33	39	42	46	50	55	58	64	71	77
1000	14	18	22	27	31	35	41	44	49	53	57	61	68	74	81
1050	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
1100	15	19	24	30	34	39	45	48	54	58	63	67	74	82	89
1150	16	20	25	31	36	40	47	51	56	61	66	70	78	86	93
1200	16	21	26	32	37	42	49	53	58	63	69	73	81	89	97
1250	17	22	27	34	39	44	51	55	61	66	72	76	84	93	101
1300	18	23	28	35	40	46	53	57	63	69	75	79	88	97	105
1350	18	24	29	37	42	47	55	59	66	71	78	82	91	100	110
1400	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1450	20	25	31	39	45	51	59	64	71	76	83	88	98	108	118
1500	20	26	32	41	47	53	61	66	73	79	86	91	101	112	122
1550	21	27	34	42	48	54	63	68	75	82	89	94	105	115	126
1600	22	28	35	43	50	56	65	70	78	84	92	97	108	119	130
1650	22	29	36	45	51	58	67	73	80	87	95	100	112	123	134
1700	23	30	37	46	53	60	69	75	83	90	98	103	115	126	138
1800	24	32	39	49	56	63	73	79	88	95	103	110	122	134	146
1900	26	33	41	51	59	67	77	83	92	100	109	116	128	141	154
2000	27	35	43	54	62	70	81	88	97	105	115	122	135	149	162
2500	34	44	54	68	78	88	101	110	122	132	144	152	169	186	203
3000	41	53	65	81	93	105	122	132	146	158	172	183	203	223	243
3500	47	62	76	95	109	123	142	154	170	185	201	213	237	260	284
4000	54	70	87	108	124	141	162	176	195	211	230	243	270	297	
5000	68	88	108	135	155	176	203	220	243	264	287				
6000	81	105	130	162	187	211	243	264	292						
7000	95	123	151	189	218	246	284								
8000	108	141	173	216	249	281									
9000	122	158	195	243	280										
10000	135	176	216	270											

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		75												Figures in body of chart = mm of door opening	
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500	6	8	10	13	15	16	19	21	23	25	27	28	32	35	38
525	7	9	11	13	15	17	20	22	24	26	28	30	33	36	40
550	7	9	11	14	16	18	21	23	25	27	29	31	35	38	42
575	7	9	12	15	17	19	22	24	26	28	31	33	36	40	44
600	8	10	12	15	17	20	23	25	27	30	32	34	38	42	45
625	8	10	13	16	18	21	24	26	28	31	34	35	39	43	47
650	8	11	13	16	19	21	25	27	30	32	35	37	41	45	49
675	9	11	14	17	20	22	26	28	31	33	36	38	43	47	51
700	9	11	14	18	20	23	26	29	32	34	38	40	44	49	53
750	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
800	10	13	16	20	23	26	30	33	36	39	43	45	50	56	61
850	11	14	17	21	25	28	32	35	39	42	46	48	54	59	64
900	11	15	18	23	26	30	34	37	41	44	48	51	57	62	68
950	12	16	19	24	28	31	36	39	43	47	51	54	60	66	72
1000	13	16	20	25	29	33	38	41	45	49	54	57	63	69	76
1050	13	17	21	26	30	34	40	43	48	52	56	60	66	73	79
1100	14	18	22	28	32	36	42	45	50	54	59	62	69	76	83
1150	15	19	23	29	33	38	44	47	52	57	62	65	73	80	87
1200	15	20	24	30	35	39	45	49	55	59	64	68	76	83	91
1250	16	21	25	32	36	41	47	51	57	62	67	71	79	87	95
1300	16	21	26	33	38	43	49	53	59	64	70	74	82	90	98
1350	17	22	27	34	39	44	51	55	61	66	72	77	85	94	102
1400	18	23	28	35	41	46	53	57	64	69	75	79	88	97	106
1450	18	24	29	37	42	48	55	59	66	71	78	82	91	101	110
1500	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1550	20	25	31	39	45	51	59	64	70	76	83	88	98	108	117
1600	20	26	32	40	46	52	61	66	73	79	86	91	101	111	121
1650	21	27	33	42	48	54	62	68	75	81	88	94	104	115	125
1700	21	28	34	43	49	56	64	70	77	84	91	97	107	118	129
1800	23	30	36	45	52	59	68	74	82	89	97	102	114	125	136
1900	24	31	38	48	55	62	72	78	86	94	102	108	120	132	144
2000	25	33	40	50	58	66	76	82	91	98	107	114	126	139	151
2500	32	41	50	63	73	82	95	103	114	123	134	142	158	174	189
3000	38	49	61	76	87	98	114	123	136	148	161	170	189	208	227
3500	44	57	71	88	102	115	132	144	159	172	188	199	221	243	265
4000	50	66	81	101	116	131	151	164	182	197	215	227	252	278	
5000	63	82	101	126	145	164	189	205	227	246	268	284			
6000	76	98	121	151	174	197	227	246	273	295					
7000	88	115	141	177	203	230	265	287							
8000	101	131	162	202	232	262									
9000	114	148	182	227	261	295									
10000	126	164	202	252	290										

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		80												Figures in body of chart = mm of door opening	
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500		8	9	12	14	15	18	19	21	23	25	27	30	33	35
525	6	8	10	12	14	16	19	20	22	24	26	28	31	34	37
550	7	8	10	13	15	17	20	21	23	25	28	29	33	36	39
575	7	9	11	14	16	18	20	22	24	27	29	31	34	37	41
600	7	9	11	14	16	18	21	23	26	28	30	32	35	39	43
625	7	10	12	15	17	19	22	24	27	29	31	33	37	41	44
650	8	10	12	15	18	20	23	25	28	30	33	35	38	42	46
675	8	10	13	16	18	21	24	26	29	31	34	36	40	44	48
700	8	11	13	17	19	22	25	27	30	32	35	37	41	46	50
750	9	12	14	18	20	23	27	29	32	35	38	40	44	49	53
800	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
850	10	13	16	20	23	26	30	33	36	39	43	45	50	55	60
900	11	14	17	21	24	28	32	35	38	42	45	48	53	59	64
950	11	15	18	22	26	29	34	37	40	44	48	51	56	62	67
1000	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
1050	12	16	20	25	29	32	37	40	45	48	53	56	62	68	75
1100	13	17	21	26	30	34	39	42	47	51	55	59	65	72	78
1150	14	18	22	27	31	35	41	44	49	53	58	61	68	75	82
1200	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
1250	15	19	24	30	34	38	44	48	53	58	63	67	74	81	89
1300	15	20	25	31	35	40	46	50	55	60	65	69	77	85	92
1350	16	21	26	32	37	42	48	52	57	62	68	72	80	88	96
1400	17	22	26	33	38	43	50	54	60	65	70	75	83	91	99
1450	17	22	27	34	39	45	51	56	62	67	73	77	86	94	103
1500	18	23	28	35	41	46	53	58	64	69	75	80	89	98	106
1550	18	24	29	37	42	48	55	60	66	72	78	83	92	101	110
1600	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1650	20	25	31	39	45	51	59	63	70	76	83	88	98	107	117
1700	20	26	32	40	46	52	60	65	72	78	85	90	101	111	121
1800	21	28	34	43	49	55	64	69	77	83	90	96	106	117	128
1900	22	29	36	45	52	58	67	73	81	88	96	101	112	124	135
2000	24	31	38	47	54	62	71	77	85	92	101	106	118	130	142
2500	30	38	47	59	68	77	89	96	106	115	126	133	148	163	177
3000	35	46	57	71	82	92	106	115	128	138	151	160	177	195	213
3500	41	54	66	83	95	108	124	135	149	161	176	186	207	228	248
4000	47	62	76	95	109	123	142	154	170	185	201	213	237	260	284
5000	59	77	95	118	136	154	177	192	213	231	251	266	296		
6000	71	92	114	142	163	185	213	231	256	277					
7000	83	108	132	166	190	215	248	269	298						
8000	95	123	151	189	218	246	284								
9000	106	138	170	213	245	277									
10000	118	154	189	237	272										

For Use with **TRANSPREAD** Density Meter Accuracy of final settings operators responsibility based on use
 ... Other rates and rate calculator can be viewed at www.transpread.com/spreaders/trailers, also available in XL format for your own computer.

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500		7	8	11	12	14	16	17	19	21	22	24	26	29	32
525		7	9	11	13	14	17	18	20	22	23	25	28	30	33
550		8	9	12	13	15	17	19	21	23	25	26	29	32	35
575	6	8	10	12	14	16	18	20	22	24	26	27	30	33	36
600	6	8	10	13	15	16	19	21	23	25	27	28	32	35	38
625	7	9	11	13	15	17	20	21	24	26	28	30	33	36	39
650	7	9	11	14	16	18	21	22	25	27	29	31	34	38	41
675	7	9	11	14	16	18	21	23	26	28	30	32	35	39	43
700	7	10	12	15	17	19	22	24	26	29	31	33	37	40	44
750	8	10	13	16	18	21	24	26	28	31	34	35	39	43	47
800	8	11	13	17	19	22	25	27	30	33	36	38	42	46	50
850	9	12	14	18	21	23	27	29	32	35	38	40	45	49	54
900	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
950	10	13	16	20	23	26	30	32	36	39	42	45	50	55	60
1000	11	14	17	21	24	27	32	34	38	41	45	47	53	58	63
1050	11	14	18	22	25	29	33	36	40	43	47	50	55	61	66
1100	12	15	19	23	27	30	35	38	42	45	49	52	58	64	69
1150	12	16	19	24	28	31	36	39	44	47	51	54	60	67	73
1200	13	16	20	25	29	33	38	41	45	49	54	57	63	69	76
1250	13	17	21	26	30	34	39	43	47	51	56	59	66	72	79
1300	14	18	22	27	31	36	41	44	49	53	58	62	68	75	82
1350	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
1400	15	19	24	29	34	38	44	48	53	57	63	66	74	81	88
1450	15	20	24	30	35	40	46	50	55	59	65	69	76	84	91
1500	16	21	25	32	36	41	47	51	57	62	67	71	79	87	95
1550	16	21	26	33	37	42	49	53	59	64	69	73	81	90	98
1600	17	22	27	34	39	44	50	55	61	66	72	76	84	93	101
1650	17	23	28	35	40	45	52	56	62	68	74	78	87	95	104
1700	18	23	29	36	41	46	54	58	64	70	76	80	89	98	107
1800	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
1900	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
2000	21	27	34	42	48	55	63	68	76	82	89	95	105	116	126
2500	26	34	42	53	60	68	79	85	95	103	112	118	131	145	158
3000	32	41	50	63	73	82	95	103	114	123	134	142	158	174	189
3500	37	48	59	74	85	96	110	120	132	144	156	166	184	202	221
4000	42	55	67	84	97	109	126	137	151	164	179	189	210	231	252
5000	53	68	84	105	121	137	158	171	189	205	223	237	263	289	
6000	63	82	101	126	145	164	189	205	227	246	268	284			
7000	74	96	118	147	169	191	221	239	265	287					
8000	84	109	135	168	193	219	252	273							
9000	95	123	151	189	218	246	284								
10000	105	137	168	210	242	273									

Gear Box...High. Gear		RATE CHART LB. PER ACRE.												Standard Duty 607091+44t	
Density..LB Cu.Ft. ...		Figures in body of chart = mm of door opening													
Width.	20	26	32	40	46	52	60	65	72	78	85	90	100	110	120
Rate															
500		6	8	9	11	12	14	15	17	18	20	21	24	26	28
525		6	8	10	11	13	15	16	18	19	21	22	25	27	30
550		7	8	10	12	14	16	17	19	20	22	23	26	29	31
575		7	9	11	13	14	16	18	20	21	23	24	27	30	33
600		7	9	11	13	15	17	18	20	22	24	26	28	31	34
625		8	9	12	14	15	18	19	21	23	25	27	30	33	35
650	6	8	10	12	14	16	18	20	22	24	26	28	31	34	37
675	6	8	10	13	15	17	19	21	23	25	27	29	32	35	38
700	7	9	11	13	15	17	20	22	24	26	28	30	33	36	40
750	7	9	11	14	16	18	21	23	26	28	30	32	35	39	43
800	8	10	12	15	17	20	23	25	27	30	32	34	38	42	45
850	8	10	13	16	19	21	24	26	29	31	34	36	40	44	48
900	9	11	14	17	20	22	26	28	31	33	36	38	43	47	51
950	9	12	14	18	21	23	27	29	32	35	38	40	45	49	54
1000	9	12	15	19	22	25	28	31	34	37	40	43	47	52	57
1050	10	13	16	20	23	26	30	32	36	39	42	45	50	55	60
1100	10	14	17	21	24	27	31	34	37	41	44	47	52	57	62
1150	11	14	17	22	25	28	33	35	39	42	46	49	54	60	65
1200	11	15	18	23	26	30	34	37	41	44	48	51	57	62	68
1250	12	15	19	24	27	31	35	38	43	46	50	53	59	65	71
1300	12	16	20	25	28	32	37	40	44	48	52	55	62	68	74
1350	13	17	20	26	29	33	38	42	46	50	54	57	64	70	77
1400	13	17	21	26	30	34	40	43	48	52	56	60	66	73	79
1450	14	18	22	27	32	36	41	45	49	54	58	62	69	75	82
1500	14	18	23	28	33	37	43	46	51	55	60	64	71	78	85
1550	15	19	23	29	34	38	44	48	53	57	62	66	73	81	88
1600	15	20	24	30	35	39	45	49	55	59	64	68	76	83	91
1650	16	20	25	31	36	41	47	51	56	61	66	70	78	86	94
1700	16	21	26	32	37	42	48	52	58	63	68	72	80	88	97
1800	17	22	27	34	39	44	51	55	61	66	72	77	85	94	102
1900	18	23	29	36	41	47	54	58	65	70	76	81	90	99	108
2000	19	25	30	38	44	49	57	62	68	74	80	85	95	104	114
2500	24	31	38	47	54	62	71	77	85	92	101	106	118	130	142
3000	28	37	45	57	65	74	85	92	102	111	121	128	142	156	170
3500	33	43	53	66	76	86	99	108	119	129	141	149	166	182	199
4000	38	49	61	76	87	98	114	123	136	148	161	170	189	208	227
5000	47	62	76	95	109	123	142	154	170	185	201	213	237	260	284
6000	57	74	91	114	131	148	170	185	204	221	241	256	284		
7000	66	86	106	132	152	172	199	215	238	258	282	298			
8000	76	98	121	151	174	197	227	246	273	295					
9000	85	111	136	170	196	221	256	277							
10000	95	123	151	189	218	246	284								

Settings approximate only, all units should be pan tested to ensure accuracy

Recommended starting settings (Operator responsible for final settings)

Settings are spinner speed followed by vane angle, and centre 'VEE' extension... ie. 770,A,B = spinner speed 770 and vane angle 'A' 'VEE' extension 'B'
 'V' = Rear Vanes folded up, 'N' = Centre 'VEE' removed, often required with damp lime.

Material	12m	18m	24m	30m	36m	SGN
Super phosphate	700,V,C	750,V,B	850,A,B	900,B,A	950,D,A	
Lime	650,V	800,V,N				
Gypsum	750,B					
DAP	700,B,C	750,B,B	850,C,B	950,D,A		
Nitraprill	800,A,C	850,C,B	900,D,A			
Urea	750,A,C	800,A,B	850,B,B	950,C,A	1050, D,A	
Sulphate of ammonia	850,C,B	N/A	N/A			

